

OsmoSGSN VTY Reference

Copyright © 2013-2014

This work is copyright by sysmocom - s.f.m.c. GmbH. All rights reserved.

COLLABORATORS

	<i>TITLE :</i> OsmoSGSN VTY Reference		
<i>ACTION</i>	<i>NAME</i>	<i>DATE</i>	<i>SIGNATURE</i>
WRITTEN BY		April 25, 2025	

REVISION HISTORY

NUMBER	DATE	DESCRIPTION	NAME
DRAFT	unknown	Automatically Generated VTY Reference	hf

1.20.3 gtp remote-ip A.B.C.D 185

1.20.4 gummei <0-999> <0-999> <0-65535> <0-254> 185

1.20.5 no gtp ran-info-relay <0-999> <0-999> <0-65535> 185

1.20.6 no gtp ran-info-relay default 186

1.20.7 no gummei 186

List of Tables

1.1	VTY Parameter Patterns	1
1.2	VTY port numbers	1

1.3.69 show sgsn

Command

```
show sgsn
```

Parameters

show

Show running system information

sgsn

Display information about the SGSN

1.3.70 show sndcp

Command

```
show sndcp
```

Parameters

show

Show running system information

sndcp

Display information about the SNDTCP protocol

1.3.71 show startup-config

Command

```
show startup-config
```

Parameters

show

Show running system information

startup-config

Contentes of startup configuration

1.3.72 show stats [skip-zero]

Command

```
show stats [skip-zero]
```

Parameters

show

Show running system information

stats

Show statistical values

[skip-zero]

Skip items with total count zero

1.3.73 show stats level (global|peer|subscriber) [skip-zero]

Command

```
show stats level (global|peer|subscriber) [skip-zero]
```

Parameters

show

Show running system information

stats

Show statistical values

level

Set the maximum group level

global

Show global groups only

peer

Show global and network peer related groups

subscriber

Show global, peer, and subscriber groups

[skip-zero]

Skip items with total count zero

1.3.74 show subscriber cache

Command

```
show subscriber cache
```

Parameters

show

Show running system information

subscriber

Show information about subscribers

cache

Display contents of subscriber cache

1.3.75 show talloc-context (application|global|all) (full|brief|DEPTH)

Command

```
show talloc-context (application|global|all) (full|brief|DEPTH)
```

Parameters

show

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

global

Global context (OTC_GLOBAL)

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

1.3.76 show talloc-context (application|global|all) (full|brief|DEPTH) filter REGEXP

Command

```
show talloc-context (application|global|all) (full|brief|DEPTH) filter REGEXP
```

Parameters

show

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

global

Global context (OTC_GLOBAL)

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

filter

Filter chunks using regular expression

REGEXP

Regular expression

1.3.77 show talloc-context (application|global|all) (full|brief|DEPTH) tree ADDRESS

Command

```
show talloc-context (application|global|all) (full|brief|DEPTH) tree ADDRESS
```

Parameters

show

Show running system information

talloc-context

Show talloc memory hierarchy

application

Application's context

global

Global context (OTC_GLOBAL)

all

All contexts, if NULL-context tracking is enabled

full

Display a full talloc memory hierarchy

brief

Display a brief talloc memory hierarchy

DEPTH

Specify required maximal depth value

tree

Display only a specific memory chunk

ADDRESS

Chunk address (e.g. 0xdeadbeef)

1.3.78 show timer [TNNNN]

Command

```
show timer [TNNNN]
```

Parameters

show

Show running system information

timer

Show timers

[TNNNN]

T- or X-timer-number -- 3GPP compliant timer number of the format '1234' or 'T1234' or 't1234'; Osmocom-specific timer number of the format: 'X1234' or 'x1234'.

1.3.79 show timer gtp [TNNNN]

Command

```
show timer gtp [TNNNN]
```

Parameters

show

Show running system information

timer

Show timers

gtp

GTP (libgtp) timers

[TNNNN]

T- or X-timer-number -- 3GPP compliant timer number of the format '1234' or 'T1234' or 't1234'; Osmocom-specific timer number of the format: 'X1234' or 'x1234'.

1.3.80 show version

Command

```
show version
```

Parameters

show

Show running system information

version

Displays program version

1.3.81 shutdown

Command

```
shutdown
```

Parameters

shutdown

Request a shutdown of the program

1.3.82 stats report

Command

```
stats report
```

Parameters

stats

Stats related commands

report

Manurally trigger reporting of stats

1.3.83 stats reset

Command

```
stats reset
```

Parameters

stats

Stats related commands

reset

Reset all rate counter stats

1.3.84 terminal length <0-512>

Command

```
terminal length <0-512>
```

Parameters

terminal

Set terminal line parameters

length

Set number of lines on a screen

<0-512>

Number of lines on screen (0 for no pausing)

1.3.85 terminal monitor

Command

```
terminal monitor
```

Parameters

terminal

Set terminal line parameters

monitor

Copy debug output to the current terminal line

1.3.86 terminal no length

Command

```
terminal no length
```

Parameters

terminal

Set terminal line parameters

no

Negate a command or set its defaults

length

Set number of lines on a screen

1.3.87 terminal no monitor

Command

```
terminal no monitor
```

Parameters

terminal

Set terminal line parameters

no

Negate a command or set its defaults

monitor

Copy debug output to the current terminal line

1.3.88 update-subscriber imsi IMSI cancel (update-procedure|subscription-withdraw)

Command

```
update-subscriber imsi IMSI cancel (update-procedure|subscription-withdraw)
```

Parameters

update-subscriber

Update subscriber list

imsi

Use the IMSI to select the subscriber

IMSI

The IMSI

cancel

Cancel (remove) subscriber record

update-procedure

The MS moved to another SGSN

subscription-withdraw

The subscription is no longer valid

1.3.89 update-subscriber imsi IMSI create

Command

```
update-subscriber imsi IMSI create
```

Parameters

update-subscriber

Update subscriber list

imsi

Use the IMSI to select the subscriber

IMSI

The IMSI

create

Create a subscriber entry

1.3.90 update-subscriber imsi IMSI destroy

Command

```
update-subscriber imsi IMSI destroy
```

Parameters

update-subscriber

Update subscriber list

imsi

Use the IMSI to select the subscriber

IMSI

The IMSI

destroy

Destroy a subscriber entry

1.3.91 update-subscriber imsi IMSI insert auth-triplet <1-5> sres SRES rand RAND kc KC

Command

```
update-subscriber imsi IMSI insert auth-triplet <1-5> sres SRES rand RAND kc KC
```

Parameters

update-subscriber

Update subscriber list

imsi

Use the IMSI to select the subscriber

IMSI

The IMSI

insert

Insert data into the subscriber record

auth-triplet

Update authentication triplet

<1-5>

Triplet index

sres

Set SRES value

SRES

SRES value (4 byte) in hex

rand

Set RAND value

RAND

RAND value (16 byte) in hex

kc

Set Kc value

KC

Kc value (8 byte) in hex

1.3.92 update-subscriber imsi IMSI update-auth-info

Command

```
update-subscriber imsi IMSI update-auth-info
```

Parameters

update-subscriber

Update subscriber list

imsi

Use the IMSI to select the subscriber

IMSI

The IMSI

update-auth-info

Complete the send authentication info procedure

1.3.93 update-subscriber imsi IMSI update-location-result (ok|system-failure|data-missi...

Command

```
update-subscriber imsi IMSI update-location-result (ok|system-failure|data-missing| ↵
unexpected-data-value|unknown-subscriber|roaming-not-allowed)
```

Parameters

update-subscriber

Update subscriber list

imsi

Use the IMSI to select the subscriber

IMSI

The IMSI

update-location-result

Complete the update location procedure

ok

The update location request succeeded

system-failure

Force error code SystemFailure

data-missing

Force error code DataMissing

unexpected-data-value

Force error code UnexpectedDataValue

unknown-subscriber

Force error code UnknownSubscriber

roaming-not-allowed

Force error code RoamingNotAllowed

1.3.94 who

Command

```
who
```

Parameters

who

Display who is on vty

1.4 config

The config node is the root for all configuration commands, which are identical to the config file format. Changes made on the telnet VTY can be made persistent with the 'write file' command.

1.4.1 banner motd default

Command

```
banner motd default
```

Parameters

banner

Set banner string

motd

Strings for motd

default

Default string

1.4.2 banner motd file [FILE]

Command

```
banner motd file [FILE]
```

Parameters

banner

Set banner

motd

Banner for motd

file

Banner from a file

[FILE]

Filename

1.4.3 bssgp

Command

```
bssgp
```

Parameters

bssgp

Configure the GPRS BSS Gateway Protocol

1.4.4 cpu-sched

Command

```
cpu-sched
```

Parameters

cpu-sched

Configure CPU Scheduler related settings

1.4.5 cs7 instance <0-15>

Command

```
cs7 instance <0-15>
```

Global attributes

Flag: !

This command applies immediately

Parameters

cs7

ITU-T Signaling System 7

instance

Configure a SS7 Instance

<0-15>

An instance of the SS7 stack

1.4.6 ctrl

Command

```
ctrl
```

Parameters

ctrl

Configure the Control Interface

1.4.7 enable password (8|) WORD

Command

```
enable password (8|) WORD
```

Parameters

enable

Modify enable password parameters

password

Assign the privileged level password

8

Specifies a HIDDEN password will follow

dummy string

WORD

The HIDDEN 'enable' password string

1.4.8 enable password LINE

Command

```
enable password LINE
```

Parameters

enable

Modify enable password parameters

password

Assign the privileged level password

LINE

The UNENCRYPTED (cleartext) 'enable' password

1.4.9 hostname WORD

Command

```
hostname WORD
```

Parameters

hostname

Set system's network name

WORD

This system's network name

1.4.10 line vty

Command

```
line vty
```

Parameters

line

Configure a terminal line

vty

Virtual terminal

1.4.11 log alarms <2-32700>

Command

```
log alarms <2-32700>
```

Parameters

log

Configure logging sub-system

alarms

Logging alarms to osmo_strrb

<2-32700>

Maximum number of messages to log

1.4.12 log file FILENAME [blocking-io]

Command

```
log file FILENAME [blocking-io]
```

Parameters

log

Configure logging sub-system

file

Logging to text file

FILENAME

Filename

[blocking-io]

Use blocking, synchronous I/O

1.4.13 log gsmtap [HOSTNAME]

Command

```
log gsmtap [HOSTNAME]
```

Parameters

log

Configure logging sub-system

gsmtap

Logging via GSMTAP

[HOSTNAME]

Host name to send the GSMTAP logging to (UDP port 4729)

1.4.14 log stderr [blocking-io]

Command

```
log stderr [blocking-io]
```

Parameters

log

Configure logging sub-system

stderr

Logging via STDERR of the process

[blocking-io]

Use blocking, synchronous I/O

1.4.15 log syslog (authpriv|cron|daemon|ftp|lpr|mail|news|user|uucp)

Command

```
log syslog (authpriv|cron|daemon|ftp|lpr|mail|news|user|uucp)
```

Parameters

log

Configure logging sub-system

syslog

Logging via syslog

authpriv

Security/authorization messages facility

cron

Clock daemon (cron/at) facility

daemon

General system daemon facility

ftp

Ftp daemon facility

lpr

Line printer facility

mail

Mail facility

news

News facility

user

Generic facility

uucp

UUCP facility

1.4.16 log syslog local <0-7>

Command

```
log syslog local <0-7>
```

Parameters

log

Configure logging sub-system

syslog

Logging via syslog

local

Syslog LOCAL facility

<0-7>

Local facility number

1.4.17 log systemd-journal [raw]

Command

```
log systemd-journal [raw]
```

Parameters

log

Configure logging sub-system

systemd-journal

Logging to systemd-journal

[raw]

Offload rendering of the meta information (location, category) to systemd

1.4.18 no banner motd

Command

```
no banner motd
```

Parameters

no

Negate a command or set its defaults

banner

Set banner string

motd

Strings for motd

1.4.19 no enable password

Command

```
no enable password
```

Parameters

no

Negate a command or set its defaults

enable

Modify enable password parameters

password

Assign the privileged level password

1.4.20 no hostname [HOSTNAME]

Command

```
no hostname [HOSTNAME]
```

Parameters

no

Negate a command or set its defaults

hostname

Reset system's network name

[HOSTNAME]

Host name of this router

1.4.21 no log alarms

Command

```
no log alarms
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

alarms

Logging alarms to osmo_strrb

1.4.22 no log file FILENAME

Command

```
no log file FILENAME
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

file

Logging to text file

FILENAME

Filename

1.4.23 no log gsmtap [HOSTNAME]

Command

```
no log gsmtap [HOSTNAME]
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

gsmtap

Logging via GSMTAP

[HOSTNAME]

Host name to send the GSMTAP logging to (UDP port 4729)

1.4.24 no log stderr

Command

```
no log stderr
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

stderr

Logging via STDERR of the process

1.4.25 no log syslog

Command

```
no log syslog
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

syslog

Logging via syslog

1.4.26 no log systemd-journal

Command

```
no log systemd-journal
```

Parameters

no

Negate a command or set its defaults

log

Configure logging sub-system

systemd-journal

Logging to systemd-journal

1.4.27 no service advanced-vty

Command

```
no service advanced-vty
```

Parameters

no

Negate a command or set its defaults

service

Set up miscellaneous service

advanced-vty

Enable advanced mode vty interface

1.4.28 no service terminal-length [<0-512>]

Command

```
no service terminal-length [<0-512>]
```

Parameters

no

Negate a command or set its defaults

service

Set up miscellaneous service

terminal-length

System wide terminal length configuration

[<0-512>]

Number of lines of VTY (0 means no line control)

1.4.29 no stats reporter log [NAME]

Command

```
no stats reporter log [NAME]
```

Parameters

no

Negate a command or set its defaults

stats

Configure stats sub-system

reporter

Configure a stats reporter

log

Report to the logger

[NAME]

Name of the reporter

1.4.30 no stats reporter statsd [NAME]

Command

```
no stats reporter statsd [NAME]
```

Parameters

no

Negate a command or set its defaults

stats

Configure stats sub-system

reporter

Configure a stats reporter

statsd

Report to a STATSD server

[NAME]

Name of the reporter

1.4.31 ns

Command

```
ns
```

Parameters

ns

Configure the GPRS Network Service

1.4.32 password (8|) WORD

Command

```
password (8|) WORD
```

Parameters

password

Assign the terminal connection password

8

Specifies a HIDDEN password will follow

dummy string

WORD

The HIDDEN line password string

1.4.33 password LINE

Command

```
password LINE
```

Parameters

password

Assign the terminal connection password

LINE

The UNENCRYPTED (cleartext) line password

1.4.34 service advanced-vty

Command

```
service advanced-vty
```

Parameters

service

Set up miscellaneous service

advanced-vty

Enable advanced mode vty interface

1.4.35 service terminal-length <0-512>

Command

```
service terminal-length <0-512>
```

Parameters

service

Set up miscellaneous service

terminal-length

System wide terminal length configuration

<0-512>

Number of lines of VTY (0 means no line control)

1.4.36 sgsn

Command

```
sgsn
```

Parameters

sgsn

Configure the SGSN

1.4.37 show history

Command

```
show history
```

Parameters

show

Show running system information

history

Display the session command history

1.4.38 stats interval <0-65535>

Command

```
stats interval <0-65535>
```

Parameters

stats

Configure stats sub-system

interval

Set the reporting interval

<0-65535>

Interval in seconds (0 disables the reporting interval)

1.4.39 stats reporter log [NAME]

Command

```
stats reporter log [NAME]
```

Parameters

stats

Configure stats sub-system

reporter

Configure a stats reporter

log

Report to the logger

[NAME]

Name of the reporter

1.4.40 stats reporter statsd [NAME]

Command

```
stats reporter statsd [NAME]
```

Parameters

stats

Configure stats sub-system

reporter

Configure a stats reporter

statsd

Report to a STATSD server

[NAME]

Name of the reporter

1.4.41 stats-tcp batch-size <1-65535>

Command

```
stats-tcp batch-size <1-65535>
```

Parameters

stats-tcp

Configure stats sub-system

batch-size

Set the number of tcp sockets that are processed per stats polling interval

<1-65535>

Number of sockets per interval

1.4.42 stats-tcp interval <0-65535>

Command

```
stats-tcp interval <0-65535>
```

Parameters

stats-tcp

Configure stats sub-system

interval

Set the tcp socket stats polling interval

<0-65535>

Interval in seconds (0 disables the polling interval)

1.5 config-log

The log node is commonly available in all Osmocom programs and allows configuring logging to stderr and/or log files, including logging category and level filtering as well as output formatting options. Note that the 'logging enable' command is required to make logging commands available on the telnet VTY.

1.5.1 logging color (0|1)

Command

```
logging color (0|1)
```

Parameters

logging

Configure logging

color

Configure color-printing for log messages

0

Don't use color for printing messages

1

Use color for printing messages

1.5.2 logging filter all (0|1)

Disable/enable general log output on a given target. Typically, 'logging filter all 1' allows to see the usual log output on a given target. Setting to '0' can be useful when logging to the telnet VTY console: mute all log output to allow typing VTY commands on the telnet prompt without interference from log output; 'logging filter all 1' then re-enables logging in the same log output configuration as before. Some applications provide more specific filters, e.g. to log a given IMSI only. To employ such filters, set 'logging filter all 0' to disable general logging, and then enable a more specific filter instead.

Command

```
logging filter all (0|1)
```

Parameters

logging

Configure logging

filter

Filter log messages

all

Do you want to log all messages?

0

Only print messages matched by other filters

1

Bypass filter and print all messages

1.5.3 logging filter bvc nsei <0-65535> bvci <0-65535>

Command

```
logging filter bvc nsei <0-65535> bvci <0-65535>
```

Parameters

logging

Configure logging

filter

Filter log messages

bvc

Filter based on BSSGP Virtual Connection

nsei

NSEI of the BVC to be filtered

<0-65535>

Network Service Entity Identifier (NSEI)

bvci

BVCI of the BVC to be filtered

<0-65535>

BSSGP Virtual Connection Identifier (BVCI)

1.5.4 logging filter nse nsei <0-65535>

Command

```
logging filter nse nsei <0-65535>
```

Parameters

logging

Configure logging

filter

Filter log messages

nse

Filter based on NS Entity

nsei

Identify NSE by NSEI

<0-65535>

Numeric identifier

1.5.5 logging filter nsvc nsvci <0-65535>

Command

```
logging filter nsvc nsvci <0-65535>
```

Parameters

logging

Configure logging

filter

Filter log messages

nsvc

Filter based on NS Virtual Connection

nsvci

Identify NS-VC by NSVCI

<0-65535>

Numeric identifier

1.5.6 logging level (mm|pag|meas|ref|gprs|llc|sndcp|slhc|ranap|sua|v42bis|gtp|rim|ra|l...

Command

```
logging level (mm|pag|meas|ref|gprs|llc|sndcp|slhc|ranap|sua|v42bis|gtp|rim|ra|lglobal| ↵
llapd|linp|lmux|lmi|lmib|lsms|lctrl|lgtp|lstats|lgsup|loap|lss7|lscdp|lsua|lm3ua| ↵
lmgcp|ljibuf|lrspro|lns|lbssgp|lnsdata|lnssignal|liuup|lpfcp|lcsn1|lio) (debug|info ↵
|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

mm

Layer3 Mobility Management (MM)

pag

Paging Subsystem

meas

Radio Measurement Processing

ref

Reference Counting

gprs

GPRS Packet Service

llc

GPRS Logical Link Control Protocol (LLC)

sndcp

GPRS Sub-Network Dependent Control Protocol (SND CP)

slhc

RFC1144 TCP/IP Header compression (SLHC)

ranap

RAN Application Part (RANAP)

sua

SCCP User Adaptation (SUA)

v42bis

V.42bis data compression (SND CP)

gtp

GPRS Tunnelling Protocol (GTP)

rim

RAN Information Management (RIM)

ra
Routing Area

lglobal
Library-internal global log family

llapd
LAPD in libosmogsm

linp
A-bis Input Subsystem

lmux
A-bis B-Subchannel TRAU Frame Multiplex

lmi
A-bis Input Driver for Signalling

lmib
A-bis Input Driver for B-Channels (voice)

lsms
Layer3 Short Message Service (SMS)

lctrl
Control Interface

lgtp
GPRS GTP library

lstats
Statistics messages and logging

lgsup
Generic Subscriber Update Protocol

loap
Osmocom Authentication Protocol

lss7
libosmo-sigtran Signalling System 7

lsccp
libosmo-sigtran SCCP Implementation

lsua
libosmo-sigtran SCCP User Adaptation

lm3ua
libosmo-sigtran MTP3 User Adaptation

lmgcp
libosmo-mgcp Media Gateway Control Protocol

ljibuf
libosmo-netif Jitter Buffer

lrspro	Remote SIM protocol
lrs	GPRS NS layer
lbssgp	GPRS BSSGP layer
lrsdata	GPRS NS layer data PDU
lrsignal	GPRS NS layer signal PDU
liuup	Iu UP layer
lpfcp	libosmo-pfcp Packet Forwarding Control Protocol
lcsn1	libosmo-csn1 Concrete Syntax Notation 1 codec
lio	libosmocore IO Subsystem
debug	Log debug messages and higher levels
info	Log informational messages and higher levels
notice	Log noticeable messages and higher levels
error	Log error messages and higher levels
fatal	Log only fatal messages

1.5.7 logging level force-all (debug|info|notice|error|fatal)

Command

```
logging level force-all (debug|info|notice|error|fatal)
```

Parameters

logging

Configure logging

level

Set the log level for a specified category

force-all

Globally force all logging categories to a specific level. This is released by the 'no logging level force-all' command. Note: any 'logging level <category> <level>' commands will have no visible effect after this, until the forced level is released.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

1.5.8 logging level set-all (debug|info|notice|error|fatal)

Command

```
logging level set-all (debug|info|notice|error|fatal)
```

Parameters**logging**

Configure logging

level

Set the log level for a specified category

set-all

Once-off set all categories to the given log level. There is no single command to take back these changes -- each category is set to the given level, period.

debug

Log debug messages and higher levels

info

Log informational messages and higher levels

notice

Log noticeable messages and higher levels

error

Log error messages and higher levels

fatal

Log only fatal messages

1.5.9 logging print category (0|1)

Command

```
logging print category (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

category

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem name

1.5.10 logging print category-hex (0|1)

Command

```
logging print category-hex (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

category-hex

Configure log message

0

Don't prefix each log message

1

Prefix each log message with category/subsystem nr in hex ('<000b>')

1.5.11 logging print extended-timestamp (0|1)

Command

```
logging print extended-timestamp (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

extended-timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp with YYYYMMDDhhmmssnnn

1.5.12 logging print file (0|1|basename) [last]

Command

```
logging print file (0|1|basename) [last]
```

Parameters

logging

Configure logging

print

Log output settings

file

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the source file and line

basename

Prefix each log message with the source file's basename (strip leading paths) and line

[last]

Log source file info at the end of a log line. If omitted, log source file info just before the log text.

1.5.13 logging print level (0|1)

Command

```
logging print level (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

level

Configure log message

0

Don't prefix each log message

1

Prefix each log message with the log level name

1.5.14 logging print thread-id (0|1)

Command

```
logging print thread-id (0|1)
```

Parameters

logging

Configure logging

print

Log output settings

thread-id

Configure log message logging Thread ID

0

Don't prefix each log message

1

Prefix each log message with current Thread ID

1.5.15 logging timestamp (0|1)

Command

```
logging timestamp (0|1)
```

Parameters

logging

Configure logging

timestamp

Configure log message timestamping

0

Don't prefix each log message

1

Prefix each log message with current timestamp

1.5.16 no logging level force-all

Command

```
no logging level force-all
```

Parameters

no

Negate a command or set its defaults

logging

Configure logging

level

Set the log level for a specified category

force-all

Release any globally forced log level set with 'logging level force-all <level>'

1.6 config-stats

1.6.1 disable

Command

```
disable
```

Parameters

disable

Disable the reporter

1.6.2 enable

Command

```
enable
```

Parameters

enable

Enable the reporter

1.6.3 flush-period <0-65535>

Command

```
flush-period <0-65535>
```

Parameters

flush-period

Configure stats sub-system

<0-65535>

Send all stats even if they have not changed (i.e. force the flush) every N-th reporting interval. Set to 0 to disable regular flush (default).

1.6.4 level (global|peer|subscriber)

Command

```
level (global|peer|subscriber)
```

Parameters

level

Set the maximum group level

global

Report global groups only

peer

Report global and network peer related groups

subscriber

Report global, peer, and subscriber groups

1.6.5 local-ip ADDR

Command

```
local-ip ADDR
```

Parameters

local-ip

Set the IP address to which we bind locally

ADDR

IP Address

1.6.6 mtu <100-65535>

Command

```
mtu <100-65535>
```

Parameters

mtu

Set the maximum packet size

<100-65535>

Size in byte

1.6.7 no local-ip

Command

```
no local-ip
```

Parameters

no

Negate a command or set its defaults

local-ip

Set the IP address to which we bind locally

1.6.8 no mtu

Command

```
no mtu
```

Parameters

no

Negate a command or set its defaults

mtu

Set the maximum packet size

1.6.9 no prefix

Command

```
no prefix
```

Parameters

no

Negate a command or set its defaults

prefix

Set the item name prefix

1.6.10 prefix PREFIX

Command

```
prefix PREFIX
```

Parameters

prefix

Set the item name prefix

PREFIX

The prefix string

1.6.11 remote-ip ADDR

Command

```
remote-ip ADDR
```

Parameters

remote-ip

Set the remote IP address to which we connect

ADDR

IP Address

1.6.12 remote-port <1-65535>

Command

```
remote-port <1-65535>
```

Parameters

remote-port

Set the remote port to which we connect

<1-65535>

Remote port number

1.7 config-line

1.7.1 bind A.B.C.D [<0-65535>]

Command

```
bind A.B.C.D [<0-65535>]
```

Parameters

bind

Accept VTY telnet connections on local interface

A.B.C.D

Local interface IP address (default: 127.0.0.1)

[<0-65535>]

Local TCP port number

1.7.2 login

Command

```
login
```

Parameters

login

Enable password checking

1.7.3 no login

Command

```
no login
```

Parameters

no

Negate a command or set its defaults

login

Enable password checking

1.8 config-ns

1.8.1 bind (fr|udp) ID

Command

```
bind (fr|udp) ID
```

Parameters

bind

Configure local Bind

fr

Frame Relay

udp

UDP/IP

ID

Unique identifier for this bind (to reference from NS-VCs, NSEs, ...)

1.8.2 ip-sns-default bind ID

Command

```
ip-sns-default bind ID
```

Parameters

ip-sns-default

Defaults for dynamically created NSEs created by IP-SNS in SGSN role

bind

IP SNS binds

ID

Name of NS udp bind whose IP endpoint will be used as IP-SNS local endpoint. Can be given multiple times.

1.8.3 no bind ID

Command

```
no bind ID
```

Parameters

no

Negate a command or set its defaults

bind

Delete a bind

ID

Unique identifier for this bind

1.8.4 no ip-sns-default bind ID

Command

```
no ip-sns-default bind ID
```

Parameters

no

Negate a command or set its defaults

ip-sns-default

Defaults for dynamically created NSEs created by IP-SNS in SGSN role

bind

IP SNS binds

ID

Name of NS udp bind whose IP endpoint will be removed as IP-SNS local endpoint.

1.8.5 no nse <0-65535>

Command

```
no nse <0-65535>
```

Parameters

no

Negate a command or set its defaults

nse

Delete a Persistent NS Entity

<0-65535>

NS Entity ID (NSEI)

1.8.6 nse <0-65535> [ip-sns-role-sgsn]

Command

```
nse <0-65535> [ip-sns-role-sgsn]
```

Parameters

nse

Persistent NS Entity

<0-65535>

NS Entity ID (NSEI)

[ip-sns-role-sgsn]

Create NSE in SGSN role (default: BSS)

1.8.7 timer (tns-block|tns-block-retries|tns-reset|tns-reset-retries|tns-test|tns-aliv...

Command

```
timer (tns-block|tns-block-retries|tns-reset|tns-reset-retries|tns-test|tns-alive|tns- ↵  
    alive-retries|tsns-prov|tsns-size-retries|tsns-config-retries|tsns-procedures- ↵  
    retries) <0-65535>
```

Parameters

timer

Network Service Timer

tns-block

(un)blocking Timer (Tns-block) timeout

tns-block-retries

(un)blocking Timer (Tns-block) number of retries

tns-reset

Reset Timer (Tns-reset) timeout

tns-reset-retries

Reset Timer (Tns-reset) number of retries

tns-test

Test Timer (Tns-test) timeout

tns-alive

Alive Timer (Tns-alive) timeout

tns-alive-retries

Alive Timer (Tns-alive) number of retries

tsns-prov

SNS Provision Timer (Tsns-prov) timeout

tsns-size-retries

SNS Size number of retries

tsns-config-retries

SNS Config number of retries

tsns-procedures-retries

SNS Procedures number of retries

<0-65535>

Timer Value

1.8.8 txqueue-max-length <1-4096>

Command

```
txqueue-max-length <1-4096>
```

Parameters**txqueue-max-length**

Set the maximum length of the txqueue (for UDP)

<1-4096>

Maximum length of the txqueue

1.9 config-bssgp

1.10 config-ctrl

1.10.1 bind A.B.C.D [<0-65535>]

Command

```
bind A.B.C.D [<0-65535>]
```

Parameters

bind

Set bind address to listen for Control connections

A.B.C.D

Local IP address (default 127.0.0.1)

[<0-65535>]

Local TCP port number

1.11 config-cs7

1.11.1 as NAME (sua|m3ua|ipa)

Command

```
as NAME (sua|m3ua|ipa)
```

Global attributes

Flag: !

This command applies immediately

Parameters

as

Configure an Application Server

NAME

Name of the Application Server

sua

SCCP User Adaptation

m3ua

MTP3 User Adaptation

ipa

IPA Multiplex (SCCP Lite)

1.11.2 asp NAME <0-65535> <0-65535> (sua|m3ua|ipa)

Command

```
asp NAME <0-65535> <0-65535> (sua|m3ua|ipa)
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

asp

Configure Application Server Process

NAME

Name of ASP

<0-65535>

Remote port number

<0-65535>

Local port number

sua

SCCP User Adaptation

m3ua

MTP3 User Adaptation

ipa

IPA Multiplex (SCCP Lite)

1.11.3 asp NAME <0-65535> <0-65535> (sua|m3ua|ipa) (sctp|tcp)

Command

```
asp NAME <0-65535> <0-65535> (sua|m3ua|ipa) (sctp|tcp)
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

asp

Configure Application Server Process

NAME

Name of ASP

<0-65535>

Remote port number

<0-65535>

Local port number

sua

SCCP User Adaptation

m3ua

MTP3 User Adaptation

ipa

IPA Multiplex (SCCP Lite)

sctp

SCTP (Stream Control Transmission Protocol)

tcp

TCP (Transmission Control Protocol)

1.11.4 **description .TEXT**

Command

```
description .TEXT
```

Parameters

description

Save human-readable description of the object

.TEXT

Text until the end of the line

1.11.5 **network-indicator (international | national | reserved | spare)**

Command

```
network-indicator (international | national | reserved | spare)
```

Global attributes

Flag: !

This command applies immediately

Parameters

network-indicator

Configure the Network Indicator

international

International Network

national

National Network

reserved

Reserved Network

spare

Spare Network

1.11.6 no as NAME

Command

```
no as NAME
```

Global attributes

Flag: !

This command applies immediately

Parameters

no

Negate a command or set its defaults

as

Disable Application Server

NAME

Name of AS

1.11.7 no asp NAME

Command

```
no asp NAME
```

Global attributes

Flag: !

This command applies immediately

Parameters

no

Negate a command or set its defaults

asp

Disable Application Server Process

NAME

Name of ASP

1.11.8 no sccp-address NAME

Command

```
no sccp-address NAME
```

Global attributes

Flag: !

This command applies immediately

Parameters

no

Negate a command or set its defaults

sccp-address

Delete an SCCP addressbook entry

NAME

Name of the SCCP Address

1.11.9 point-code POINT_CODE

Command

```
point-code POINT_CODE
```

Global attributes

Flag: !

This command applies immediately

Parameters

point-code

Configure the local Point Code

POINT_CODE

Point Code

1.11.10 point-code delimiter (default|dash)

Command

```
point-code delimiter (default|dash)
```

Global attributes

Flag: !

This command applies immediately

Parameters

point-code

Point Code

delimiter

Configure Point Code Delimiter

default

Use dot as delimiter

dash

User dash as delimiter

1.11.11 point-code format <1-24> [<1-23>] [<1-22>]

Command

```
point-code format <1-24> [<1-23>] [<1-22>]
```

Global attributes

Flag: !

This command applies immediately

Parameters

point-code

Point Code

format

Configure Point Code Format

<1-24>

Length of first PC component

[<1-23>]

Length of second PC component

[<1-22>]

Length of third PC component

1.11.12 point-code format default

Command

```
point-code format default
```

Global attributes

Flag: !

This command applies immediately

Parameters

point-code

Point Code

format

Configure Point Code Format

default

Default Point Code Format (3.8.3)

1.11.13 sccp max-optional-data (<0-999999>|standard)

Command

```
sccp max-optional-data (<0-999999>|standard)
```

Global attributes

Flag: !

This command applies immediately

Parameters

sccp

Configure SCCP behavior

max-optional-data

Adjust the upper bound for the optional data length (the payload) for CR, CC, CREF and RLSD messages. For any Optional Data part larger than this value in octets, send CR, CC, CREF and RLSD messages without any payload, and send the data payload in a separate Data Form 1 message. ITU-T Q.713 sections 4.2 thru 4.5 define a limit of 130 bytes for the 'Data' parameter. This limit can be adjusted here. May be useful for interop with nonstandard SCCP peers.

<0-999999>

Set a non-standard maximum allowed number of bytes

standard

Use the ITU-T Q.713 4.2 to 4.5 standard value of 130

1.11.14 sccp-address NAME

Command

```
sccp-address NAME
```

Global attributes

Flag: !

This command applies immediately

Parameters

sccp-address

Create/Modify an SCCP addressbook entry

NAME

Name of the SCCP Address

1.11.15 sccp-timer (conn_est|ias|iar|rel|repeat_rel|int|guard|reset|reassembly) <1-99999...

Command

```
sccp-timer (conn_est|ias|iar|rel|repeat_rel|int|guard|reset|reassembly) <1-99999>
```

Global attributes

Flag: !

This command applies immediately

Parameters

sccp-timer

Configure SCCP timer values, see ITU-T Q.714

conn_est

Waiting for connection confirm message, 1 to 2 minutes (default: 60)

ias

Send keep-alive: on an idle connection, delay before sending an Idle Timer message, 5 to 10 minutes (default: 420)

iar

Receive keep-alive: on an idle connection, delay until considering a connection as stale, 11 to 21 minutes (default: 900)

rel

Waiting for release complete message, 10 to 20 seconds (default: 10)

repeat_rel

Waiting for release complete message; or to repeat sending released message after the initial expiry, 10 to 20 seconds (default: 10)

int

Waiting for release complete message; or to release connection resources, freeze the LRN and alert a maintenance function after the initial expiry, extending to 1 minute (default: 60)

guard

Waiting to resume normal procedure for temporary connection sections during the restart procedure, 23 to 25 minutes (default: 1380)

reset

Waiting to release temporary connection section or alert maintenance function after reset request message is sent, 10 to 20 seconds (default: 10)

reassembly

Waiting to receive all the segments of the remaining segments, single segmented message after receiving the first segment, 10 to 20 seconds (default: 10)

<1-999999>

Timer value, in seconds

1.11.16 secondary-pc POINT_CODE

Command

```
secondary-pc POINT_CODE
```

Global attributes

Flag: !

This command applies immediately

Parameters

secondary-pc

Configure the local Secondary Point Code

POINT_CODE

Point Code

1.11.17 sls-opc-dpc [opc-shift] [<0-8>] [dpc-shift] [<0-8>]

Command

```
sls-opc-dpc [opc-shift] [<0-8>] [dpc-shift] [<0-8>]
```

Global attributes

Flag: !

This command applies immediately

Parameters

sls-opc-dpc

Shift OPC and DPC bits used during routing decision

[opc-shift]

Shift OPC bits used during routing decision

[<0-8>]

How many bits from ITU OPC field (starting from least-significant-bit) to skip (default=0). 6 bits are always used

[dpc-shift]

Shift DPC bits used during routing decision

[<0-8>]

How many bits from ITU DPC field (starting from least-significant-bit) to skip (default=0). 6 bits are always used

1.11.18 sls-shift <0-6>

Command

```
sls-shift <0-6>
```

Global attributes

Flag: !

This command applies immediately

Parameters

sls-shift

Shift SLS bits used during routing decision

<0-6>

How many bits from derivated 7-bit extended-SLS (OPC, DPC, SLS) field (starting from least-significant-bit) to skip

1.11.19 xua rkm routing-key-allocation (static-only|dynamic-permitted)

Command

```
xua rkm routing-key-allocation (static-only|dynamic-permitted)
```

Global attributes

Flag: !

This command applies immediately

Parameters

xua

SIGTRAN xxxUA related

rkm

Routing Key Management

routing-key-allocation

Routing Key Management Allocation Policy

static-only

Only static (pre-configured) Routing Keys permitted

dynamic-permitted

Dynamically allocate Routing Keys for what ASPs request

1.12 config-cs7-as

1.12.1 asp NAME

Command

```
asp NAME
```

Global attributes

Flag: !

This command applies immediately

Parameters

asp

Specify that a given ASP is part of this AS

NAME

Name of ASP to be added to AS

1.12.2 binding-table reset

Command

```
binding-table reset
```

Global attributes

Flag: !

This command applies immediately

Parameters

binding-table

AS Loadshare binding table operations

reset

Reset loadshare binding table

1.12.3 description .TEXT

Command

```
description .TEXT
```

Parameters

description

Save human-readable description of the object

.TEXT

Text until the end of the line

1.12.4 no asp NAME

Command

```
no asp NAME
```

Global attributes

Flag: !

This command applies immediately

Parameters

no

Negate a command or set its defaults

asp

Specify ASP to be removed from this AS

NAME

Name of ASP to be removed

1.12.5 no traffic-mode

Command

```
no traffic-mode
```

Parameters

no

Negate a command or set its defaults

traffic-mode

Remove explicit traffic mode of operation of this AS

1.12.6 point-code override dpc PC

Command

```
point-code override dpc PC
```

Global attributes

Flag: !

This command applies immediately

Parameters

point-code

Point Code Specific Features

override

Override (force) a point-code to hard-coded value

dpc

Override Source Point Code

PC

Override Destination Point Code

1.12.7 point-code override patch-sccp (disabled|both)

Command

```
point-code override patch-sccp (disabled|both)
```

Global attributes

Flag: !

This command applies immediately

Parameters

point-code

Point Code Specific Features

override

Override (force) a point-code to hard-coded value

patch-sccp

Patch point code values into SCCP called/calling address

disabled

Don't patch any point codes into SCCP called/calling address

both

Patch both origin and destination point codes into SCCP called/calling address

1.12.8 qos-class <0-7>

Command

```
qos-class <0-7>
```

Global attributes

Flag: !

This command applies immediately

Parameters

qos-class

Specify QoS Class of AS

<0-7>

QoS Class

1.12.9 recovery-timeout <1-2000>

Command

```
recovery-timeout <1-2000>
```

Global attributes

Flag: !

This command applies immediately

Parameters

recovery-timeout

Specifies the recovery timeout value in milliseconds

<1-2000>

Recovery Timeout in Milliseconds

1.12.10 routing-key RCONTEXT DPC

Command

```
routing-key RCONTEXT DPC
```

Global attributes

Flag: !

This command applies immediately

Parameters

routing-key

Define a routing key

RCONTEXT

Routing context number

DPC

Destination Point Code

1.12.11 routing-key RCONTEXT DPC si (aal2|bicc|b-isup|h248|isup|sat-isup|sccp|tup)

Command

```
routing-key RCONTEXT DPC si (aal2|bicc|b-isup|h248|isup|sat-isup|sccp|tup)
```

Global attributes

Flag: !

This command applies immediately

Parameters

routing-key

Define a routing key

RCONTEXT

Routing context number

DPC

Destination Point Code

si

Match on Service Indicator

aal2

ATM Adaption Layer 2

bicc

Bearer Independent Call Control

b-isup

Broadband ISDN User Part

h248

H.248

isup

ISDN User Part

sat-isup

Sattelite ISDN User Part

sccp

Signalling Connection Control Part

tup

Telephony User Part

1.12.12 routing-key RCONTEXT DPC si (aal2|bicc|b-isup|h248|isup|sat-isup|sccp|tup) ssn S...

Command

```
routing-key RCONTEXT DPC si (aal2|bicc|b-isup|h248|isup|sat-isup|sccp|tup) ssn SSN
```

Global attributes

Flag: !

This command applies immediately

Parameters

routing-key

Define a routing key

RCONTEXT

Routing context number

DPC

Destination Point Code

si

Match on Service Indicator

aal2

ATM Adaption Layer 2

bicc

Bearer Independent Call Control

b-isup

Broadband ISDN User Part

h248

H.248

isup

ISDN User Part

sat-isup

Sattelite ISDN User Part

sccp

Signalling Connection Control Part

tup

Telephony User Part

ssn

Match on Sub-System Number

SSN

Sub-System Number to match on

1.12.13 routing-key RCONTEXT DPC ssn SSN

Command

```
routing-key RCONTEXT DPC ssn SSN
```

Global attributes

Flag: !

This command applies immediately

Parameters

routing-key

Define a routing key

RCONTEXT

Routing context number

DPC

Destination Point Code

ssn

Match on Sub-System Number

SSN

Sub-System Number to match on

1.12.14 sls-shift <0-3>

Command

```
sls-shift <0-3>
```

Global attributes

Flag: !

This command applies immediately

Parameters

sls-shift

Shift SLS bits used during routing decision

<0-3>

How many bits from SLS field (starting from least-significant-bit) to skip

1.12.15 traffic-mode (broadcast | roundrobin | override)

Command

```
traffic-mode (broadcast | roundrobin | override)
```

Parameters

traffic-mode

Specifies traffic mode of operation of the ASP within the AS

broadcast

Broadcast to all ASP within AS

roundrobin

Round-Robin between all ASP within AS

override

Override

1.12.16 traffic-mode loadshare [bindings] [sls] [opc-sls] [opc-shift] [<0-2>]

Command

```
traffic-mode loadshare [bindings] [sls] [opc-sls] [opc-shift] [<0-2>]
```

Parameters

traffic-mode

Specifies traffic mode of operation of the ASP within the AS

loadshare

Share Load among all ASP within AS

[bindings]

Configure Loadshare parameters

[sls]

Configure Loadshare SLS generation parameters

[opc-sls]

Generate extended SLS with OPC information

[opc-shift]

Shift OPC bits used during routing decision

[<0-2>]

How many bits from ITU OPC field (starting from least-significant-bit) to skip (default=0). 6 bits are always used

1.13 config-cs7-asp

1.13.1 block

Command

```
block
```

Global attributes**Flag: @**

This command applies on VTY node exit

Parameters**block**

Allows a SCTP Association with ASP, but doesn't let it become active

1.13.2 description .TEXT

Command

```
description .TEXT
```

Parameters**description**

Save human-readable description of the object

.TEXT

Text until the end of the line

1.13.3 local-ip (A.B.C.D|X:X::X:X) [primary]

Command

```
local-ip (A.B.C.D|X:X::X:X) [primary]
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

local-ip

Specify Local IP Address from which to contact ASP

A.B.C.D

Local IPv4 Address from which to contact of ASP

X:X::X:X

Local IPv6 Address from which to contact of ASP

[primary]

Signal the SCTP peer to use this address as Primary Address

1.13.4 no local-ip (A.B.C.D|X:X::X:X)

Command

```
no local-ip (A.B.C.D|X:X::X:X)
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

no

Negate a command or set its defaults

local-ip

Specify Local IP Address from which to contact ASP

A.B.C.D

Local IPv4 Address from which to contact of ASP

X:X::X:X

Local IPv6 Address from which to contact of ASP

1.13.5 no quirk (no_notify|daud_in_asp|snm_inactive)

Command

```
no quirk (no_notify|daud_in_asp|snm_inactive)
```

Global attributes

Flag: !

This command applies immediately

Parameters

no

Negate a command or set its defaults

quirk

Disable quirk to work around interop issues

no_notify

Peer SG doesn't send NTFY(AS-INACTIVE) after ASP-UP

daud_in_asp

Allow Rx of DAUD in ASP role

snm_inactive

Allow Rx of [S]SNM in AS-INACTIVE state

1.13.6 no remote-ip (A.B.C.D|X:X::X:X)

Command

```
no remote-ip (A.B.C.D|X:X::X:X)
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

no

Negate a command or set its defaults

remote-ip

Specify Remote IP Address of ASP

A.B.C.D

Remote IPv4 Address of ASP

X:X::X:X

Remote IPv6 Address of ASP

1.13.7 no sctp-param init (num-ostreams|max-instreams|max-attempts|timeout)

Command

```
no sctp-param init (num-ostreams|max-instreams|max-attempts|timeout)
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

no

Negate a command or set its defaults

sctp-param

Configure SCTP parameters

init

Configure INIT related parameters

num-ostreams

Configure INIT Number of Outbound Streams

max-instreams

Configure INIT Maximum Inboud Streams

max-attempts

Configure INIT Maximum Attempts

timeout

Configure INIT Timeout (milliseconds)

1.13.8 qos-class <0-7>

Command

```
qos-class <0-7>
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

qos-class

Specify QoS Class of ASP

<0-7>

QoS Class

1.13.9 quirk (no_notify|daud_in_asp|snm_inactive)

Command

```
quirk (no_notify|daud_in_asp|snm_inactive)
```

Global attributes

Flag: !

This command applies immediately

Parameters

quirk

Enable quirk to work around interop issues

no_notify

Peer SG doesn't send NTFY(AS-INACTIVE) after ASP-UP

daud_in_asp

Allow Rx of DAUD in ASP role

snm_inactive

Allow Rx of [S]SNM in AS-INACTIVE state

1.13.10 remote-ip (A.B.C.D|X:X::X:X) [primary]

Command

```
remote-ip (A.B.C.D|X:X::X:X) [primary]
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

remote-ip

Specify Remote IP Address of ASP

A.B.C.D

Remote IPv4 Address of ASP

X:X::X:X

Remote IPv6 Address of ASP

[primary]

Set remote address as SCTP Primary Address

1.13.11 role (sg|asp|ipsp)

Command

```
role (sg|asp|ipsp)
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

role

Specify the xUA role for this ASP

sg

SG (Signaling Gateway)

asp

ASP (Application Server Process)

ipsp

IPSP (IP Signalling Point)

1.13.12 sctp-param init (num-ostreams|max-instreams|max-attempts|timeout) <0-65535>

Command

```
sctp-param init (num-ostreams|max-instreams|max-attempts|timeout) <0-65535>
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

sctp-param

Configure SCTP parameters

init

Configure INIT related parameters

num-ostreams

Configure INIT Number of Outbound Streams

max-instreams

Configure INIT Maximum Inboud Streams

max-attempts

Configure INIT Maximum Attempts

timeout

Configure INIT Timeout (milliseconds)

<0-65535>

Value of the parameter

1.13.13 shutdown

Command

```
shutdown
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

shutdown

Terminates SCTP association; New associations will be rejected

1.13.14 timer lm (wait_asp_up|wait_notify|wait_notify_rkm|wait_rk_reg_resp) <1-999999>

Command

```
timer lm (wait_asp_up|wait_notify|wait_notify_rkm|wait_rk_reg_resp) <1-999999>
```

Global attributes

Flag: !

This command applies immediately

Parameters

timer

Configure ASP default timer values

lm

Configure ASP default lm timer values

wait_asp_up

Restart ASP after timeout waiting for ASP UP (SG role) / ASP UP ACK (ASP role) (s) (default: 20)

wait_notify

Restart ASP after timeout waiting for NOTIFY (s) (default: 2)

wait_notify_rkm

Restart ASP after timeout waiting for NOTIFY after RKM registration (s) (default: 20)

wait_rk_reg_resp

Restart ASP after timeout waiting for RK_REG_RESP (s) (default: 10)

<1-999999>

Timer value, in seconds

1.13.15 transport-role (client|server)

Command

```
transport-role (client|server)
```

Global attributes

Flag: @

This command applies on VTY node exit

Parameters

transport-role

Specify the transport layer role for this ASP

client

Operate as a client; connect to a server

server

Operate as a server; wait for client connections

1.14 config-cs7-sccpaddr

1.14.1 global-title

Command

```
global-title
```

Global attributes

Flag: !

This command applies immediately

Parameters

global-title

Add/Modify Global Title

1.14.2 no global-title

Command

```
no global-title
```

Global attributes

Flag: !

This command applies immediately

Parameters

no

Negate a command or set its defaults

global-title

Remove Global Title

1.14.3 no point-code

Command

```
no point-code
```

Global attributes

Flag: !

This command applies immediately

Parameters

no

Negate a command or set its defaults

point-code

Remove point-code Number

1.14.4 no subsystem-number

Command

```
no subsystem-number
```

Global attributes

Flag: !

This command applies immediately

Parameters

no

Negate a command or set its defaults

subsystem-number

Remove Subsystem Number

1.14.5 point-code POINT_CODE

Command

```
point-code POINT_CODE
```

Global attributes

Flag: !

This command applies immediately

Parameters

point-code

Add point-code Number

POINT_CODE

PC

1.14.6 routing-indicator (GT|PC|IP)

Command

```
routing-indicator (GT|PC|IP)
```

Global attributes

Flag: !

This command applies immediately

Parameters

routing-indicator

Add Routing Indicator

GT

by global-title

PC

by point-code

IP

by ip-address

1.14.7 subsystem-number <0-4294967295>

Command

```
subsystem-number <0-4294967295>
```

Global attributes

Flag: !

This command applies immediately

Parameters

subsystem-number

Add Subsystem Number

<0-4294967295>

SSN

1.15 config-cs7-sccpaddr-gt

1.15.1 digits DIGITS

Command

```
digits DIGITS
```

Global attributes

Flag: !

This command applies immediately

Parameters

digits

Set Global Title Digits

DIGITS

Number digits

1.15.2 global-title-indicator <0-15>

Command

```
global-title-indicator <0-15>
```

Global attributes

Flag: !

This command applies immediately

Parameters

global-title-indicator

Set Global Title Indicator

<0-15>

GTI

1.15.3 nature-of-address-indicator <0-127>

Command

```
nature-of-address-indicator <0-127>
```

Global attributes

Flag: !

This command applies immediately

Parameters

nature-of-address-indicator

Set Global Title Nature of Address Indicator

<0-127>

NAI

1.15.4 numbering-plan-indicator <0-15>

Command

```
numbering-plan-indicator <0-15>
```

Global attributes

Flag: !

This command applies immediately

Parameters

numbering-plan-indicator

Set Global Title Numbering Plan Indicator

<0-15>

NPI

1.15.5 translation-type <0-255>

Command

```
translation-type <0-255>
```

Global attributes

Flag: !

This command applies immediately

Parameters

translation-type

Set Global Title Translation Type

<0-255>

TT

1.16 config-cpu-sched

1.16.1 cpu-affinity (self|all|<0-4294967295>|THREADNAME) CPUHEXMASK [delay]

Command

```
cpu-affinity (self|all|<0-4294967295>|THREADNAME) CPUHEXMASK [delay]
```

Global attributes

Flag: !

This command applies immediately

Parameters

cpu-affinity

Set CPU affinity mask on a (group of) thread(s)

self

Set CPU affinity mask on thread running the VTY

all

Set CPU affinity mask on all process' threads

<0-4294967295>

Set CPU affinity mask on a thread with specified PID

THREADNAME

Set CPU affinity mask on a thread with specified thread name

CPUHEXMASK

CPU affinity mask

[delay]

If set, delay applying the affinity mask now and let the app handle it at a later point

1.16.2 policy rr <1-32>

Command

```
policy rr <1-32>
```

Global attributes**Flag: !**

This command applies immediately

Parameters**policy**

Set the scheduling policy to use for the process

rr

Use the SCHED_RR real-time scheduling algorithm

<1-32>

Set the SCHED_RR real-time priority

1.17 config-ns-bind

1.17.1 accept-dynamic-ip-sns

Command

```
accept-dynamic-ip-sns
```

Parameters**accept-dynamic-ip-sns**

Allow to create dynamic NS Entities by IP-SNS PDUs

1.17.2 accept-ipaccess

Command

```
accept-ipaccess
```

Parameters

accept-ipaccess

Allow to create dynamic NS Entity by NS Reset PDU on UDP (ip.access style)

1.17.3 dscp <0-63>

Command

```
dscp <0-63>
```

Parameters

dscp

Set DSCP/TOS on the UDP socket

<0-63>

DSCP Value

1.17.4 fr NETIF (fr|frnet)

Command

```
fr NETIF (fr|frnet)
```

Parameters

fr

frame relay

NETIF

Interface name(e.g. ep0)

fr

fr (user) is used by BSS or SGSN attached to UNI of a FR network

frnet

frnet (network) is used by SGSN if BSS is directly attached

1.17.5 ip-sns signalling-weight <0-254> data-weight <0-254>

Command

```
ip-sns signalling-weight <0-254> data-weight <0-254>
```

Parameters

ip-sns

IP SNS

signalling-weight

signalling weight used by IP-SNS dynamic configuration

<0-254>

signalling weight used by IP-SNS dynamic configuration

data-weight

data weight used by IP-SNS dynamic configuration

<0-254>

data weight used by IP-SNS dynamic configuration

1.17.6 listen (A.B.C.D|X:X::X:X) <1-65535>

Command

```
listen (A.B.C.D|X:X::X:X) <1-65535>
```

Parameters

listen

Configure local IP + Port of this bind

A.B.C.D

Local IPv4 Address

X:X::X:X

Local IPv6 Address

<1-65535>

Local UDP Port

1.17.7 no accept-dynamic-ip-sns

Command

```
no accept-dynamic-ip-sns
```

Parameters

no

Negate a command or set its defaults

accept-dynamic-ip-sns

Disable dynamic creation of NS Entities by IP-SNS PDUs

1.17.8 no accept-ipaccess

Command

```
no accept-ipaccess
```

Parameters

no

Negate a command or set its defaults

accept-ipaccess

Reject NS Reset PDU on UDP (ip.access style)

1.17.9 no dscp

Command

```
no dscp
```

Parameters

no

Set DSCP/TOS on the UDP socket

dscp

DSCP Value

1.17.10 no fr NETIF

Command

```
no fr NETIF
```

Parameters

no

Negate a command or set its defaults

fr

Delete a frame relay link

NETIF

Delete a frame relay link

1.17.11 no listen

Command

```
no listen
```

Parameters

no

Negate a command or set its defaults

listen

Delete a IP/Port assignment

1.17.12 socket-priority <0-255>

Command

```
socket-priority <0-255>
```

Parameters

socket-priority

Set socket priority on the UDP socket

<0-255>

Priority Value (>6 requires CAP_NET_ADMIN)

1.18 config-ns-nse

1.18.1 ip-sns-bind BINDID

Command

```
ip-sns-bind BINDID
```

Parameters

ip-sns-bind

IP SNS binds

BINDID

Name of NS udp bind whose IP endpoint will be used as IP-SNS local endpoint. Can be given multiple times.

1.18.2 ip-sns-remote (A.B.C.D|X:X::X:X) <1-65535>

Command

```
ip-sns-remote (A.B.C.D|X:X::X:X) <1-65535>
```

Parameters

ip-sns-remote

SNS Initial Endpoint

A.B.C.D

SGSN IPv4 Address

X:X::X:X

SGSN IPv6 Address

<1-65535>

SGSN UDP Port

1.18.3 no ip-sns-bind BINDID

Command

```
no ip-sns-bind BINDID
```

Parameters

no

Negate a command or set its defaults

ip-sns-bind

IP SNS binds

BINDID

Name of NS udp bind whose IP endpoint will not be used as IP-SNS local endpoint

1.18.4 no ip-sns-remote (A.B.C.D|X:X::X:X) <1-65535>

Command

```
no ip-sns-remote (A.B.C.D|X:X::X:X) <1-65535>
```

Parameters

no

Negate a command or set its defaults

ip-sns-remote

Delete a SNS Initial Endpoint

A.B.C.D

SGSN IPv4 Address

X:X::X:X

SGSN IPv6 Address

<1-65535>

SGSN UDP Port

1.18.5 no nsvc fr NETIF dlci <16-1007>

Command

```
no nsvc fr NETIF dlci <16-1007>
```

Parameters

no

Negate a command or set its defaults

nsvc

Delete frame relay NS-VC

fr

frame relay

NETIF

frame relay interface. Must be registered via fr vty

dlci

Data Link connection identifier

<16-1007>

Data Link connection identifier

1.18.6 no nsvc ipa BIND (A.B.C.D|X:X::X:X) <1-65535> nsvci <0-65535>

Command

```
no nsvc ipa BIND (A.B.C.D|X:X::X:X) <1-65535> nsvci <0-65535>
```

Parameters

no

Negate a command or set its defaults

nsvc

Delete a NS Virtual Connection

ipa

NS over UDP

BIND

A unique bind identifier created by ns bind

A.B.C.D

Remote IPv4 Address

X:X::X:X

Remote IPv6 Address

<1-65535>

Remote UDP Port

nsvci

NS Virtual Connection ID (NS-VCI)

<0-65535>

NS Virtual Connection ID (NS-VCI)

1.18.7 no nsvc nsvci <0-65535>

Command

```
no nsvc nsvci <0-65535>
```

Parameters

no

Negate a command or set its defaults

nsvc

Delete NSVC

nsvci

NS Virtual Connection ID (NS-VCI)

<0-65535>

NS Virtual Connection ID (NS-VCI)

1.18.8 no nsvc udp BIND (A.B.C.D|X:X::X:X) <1-65535>

Command

```
no nsvc udp BIND (A.B.C.D|X:X::X:X) <1-65535>
```

Parameters

no

Negate a command or set its defaults

nsvc

Delete a NS Virtual Connection

udp

NS over UDP

BIND

A unique bind identifier created by ns bind

A.B.C.D

Remote IPv4 Address

X:X::X:X

Remote IPv6 Address

<1-65535>

Remote UDP Port

1.18.9 nsvc fr NETIF dlci <16-1007> nsvci <0-65535>

Command

```
nsvc fr NETIF dlci <16-1007> nsvci <0-65535>
```

Parameters

nsvc

NS Virtual Connection

fr

frame relay

NETIF

frame relay interface. Must be registered via fr vty

dlci

NS Virtual Connection ID (NS-VCI)

<16-1007>

NS Virtual Connection ID (NS-VCI)

nsvci

Data Link connection identifier

<0-65535>

Data Link connection identifier

1.18.10 nsvc ipa BIND (A.B.C.D|X:X::X:X) <1-65535> nsvci <0-65535>

Command

```
nsvc ipa BIND (A.B.C.D|X:X::X:X) <1-65535> nsvci <0-65535>
```

Parameters

nsvc

NS Virtual Connection

ipa

NS over UDP ip.access style (uses RESET/BLOCK)

BIND

A unique bind identifier created by ns bind

A.B.C.D

Remote IPv4 Address

X:X::X:X

Remote IPv6 Address

<1-65535>

Remote UDP Port

nsvci

NS Virtual Connection ID (NS-VCI)

<0-65535>

NS Virtual Connection ID (NS-VCI)

1.18.11 nsvc udp BIND (A.B.C.D|X:X::X:X) <1-65535>

Command

```
nsvc udp BIND (A.B.C.D|X:X::X:X) <1-65535>
```

Parameters

nsvc

NS Virtual Connection

udp

NS over UDP

BIND

A unique bind identifier created by ns bind

A.B.C.D

Remote IPv4 Address

X:X::X:X

Remote IPv6 Address

<1-65535>

Remote UDP Port

1.18.12 nsvc udp BIND (A.B.C.D|X:X::X:X) <1-65535> signalling-weight <0-254> data-weight...

Command

```
nsvc udp BIND (A.B.C.D|X:X::X:X) <1-65535> signalling-weight <0-254> data-weight <0-254>
```

Parameters

nsvc

NS Virtual Connection

udp

NS over UDP

BIND

A unique bind identifier created by ns bind

A.B.C.D

Remote IPv4 Address

X:X::X:X

Remote IPv6 Address

<1-65535>

Remote UDP Port

signalling-weight

Signalling weight of the NSVC (default = 1)

<0-254>

Signalling weight of the NSVC (default = 1)

data-weight

Data weight of the NSVC (default = 1)

<0-254>

Data weight of the NSVC (default = 1)

1.19 config-sgsn

Configure the remote GGSN, access-control and other attributes of the SGSN

1.19.1 access-point-name NAME

Command

```
access-point-name NAME
```

Parameters

access-point-name

Globally allow the given APN name for all subscribers.

NAME

Add this NAME to the list

1.19.2 apn APNAME ggsn <0-255>

Command

```
apn APNAME ggsn <0-255>
```

Parameters

apn

Configure the information per APN

APNAME

The APN gateway name optionally prefixed by '*' (wildcard)

ggsn

Select the GGSN to use for the given APN gateway prefix

<0-255>

The GGSN id

1.19.3 apn APNAME imsi-prefix IMSIPRE ggsn <0-255>

Command

```
apn APNAME imsi-prefix IMSIPRE ggsn <0-255>
```

Parameters

apn

Configure the information per APN

APNAME

The APN gateway name optionally prefixed by '*' (wildcard)

imsi-prefix

Select the GGSN to use for the given APN gateway prefix if and only if the IMSI matches the given prefix.

IMSIPRE

An IMSI prefix

ggsn

Select the GGSN to use when APN gateway and IMSI prefix match

<0-255>

The GGSN id

1.19.4 asn1 debug (1|0)

Command

```
asn1 debug (1|0)
```

Parameters

asn1

ASN.1 settings

debug

Enable ASN.1 debug messages

1

Log ASN.1 debug messages to stderr

0

Do not log ASN.1 debug messages to stderr

1.19.5 asn1 xer-print (1|0)

Command

```
asn1 xer-print (1|0)
```

Parameters

asn1

ASN.1 settings

xer-print

Log human readable representations of all ASN.1 messages to stderr

1

Log XML representation of all ASN.1 messages to stderr

0

Do not log decoded ASN.1 messages to stderr

1.19.6 auth-policy (accept-all|closed|acl-only|remote)

Command

```
auth-policy (accept-all|closed|acl-only|remote)
```

Parameters

auth-policy

Configure the Authorization policy of the SGSN. This setting determines which subscribers are permitted to register to the network.

accept-all

Accept all IMSIs (DANGEROUS)

closed

Accept only home network subscribers or those in the ACL

acl-only

Accept only subscribers in the ACL

remote

Use remote subscription data only (HLR)

1.19.7 authentication (optional|required)

Command

```
authentication (optional|required)
```

Parameters**authentication**

Whether to enforce MS authentication in GERAN (only with auth-policy remote)

optional

Allow MS to attach via GERAN without authentication (default and only possible value for non-remote auth-policy)

required

Always require authentication (only available for auth-policy remote, default with that auth-policy)

1.19.8 cdr filename NAME

Command

```
cdr filename NAME
```

Parameters**cdr**

CDR

filename

Set the file name for the call-data-record file, logging the data usage of each subscriber.

NAME

filename

1.19.9 cdr interval <1-2147483647>

Command

```
cdr interval <1-2147483647>
```

Parameters

cdr

CDR

interval

Set the interval for the call-data-record file

<1-2147483647>

interval in seconds

1.19.10 cdr trap

Command

```
cdr trap
```

Parameters

cdr

CDR

trap

Enable sending CDR via TRAP CTRL messages

1.19.11 compression rfc1144 active slots <1-256>

Command

```
compression rfc1144 active slots <1-256>
```

Parameters

compression

Configure compression

rfc1144

RFC1144 Header compression scheme

active

Compression is actively proposed

slots

Number of compression state slots

<1-256>

Number of compression state slots

1.19.12 compression rfc1144 passive

Command

```
compression rfc1144 passive
```

Parameters

compression

Configure compression

rfc1144

RFC1144 Header compression scheme

passive

Compression is available on request

1.19.13 compression v42bis active direction (ms|sgsn|both) codewords <512-65535> strlen ...

Command

```
compression v42bis active direction (ms|sgsn|both) codewords <512-65535> strlen <6-250>
```

Parameters

compression

Configure compression

v42bis

V.42bis data compression scheme

active

Compression is actively proposed

direction

Direction in which the compression shall be active (p0)

ms

Compress ms->sgsn direction only

sgsn

Compress sgsn->ms direction only

both

Both directions

codewords

Number of codewords (p1)

<512-65535>

Number of codewords

strlen

Maximum string length (p2)

<6-250>

Maximum string length

1.19.14 compression v42bis passive

Command

```
compression v42bis passive
```

Parameters

compression

Configure compression

v42bis

V.42bis data compression scheme

passive

Compression is available on request

1.19.15 cs7-instance-iu <0-15>

Command

```
cs7-instance-iu <0-15>
```

Parameters

cs7-instance-iu

Set SS7 to be used by the Iu-Interface.

<0-15>

SS7 instance reference number (default: 0)

1.19.16 encryption cipher-plugin-path PATH

Command

```
encryption cipher-plugin-path PATH
```

Parameters

encryption

Set encryption algorithms for SGSN

cipher-plugin-path

Path to gprs encryption cipher plugin directory

PATH

Plugin path

1.19.17 encryption gea <0-4> [<0-4>] [<0-4>] [<0-4>] [<0-4>]

Command

```
encryption gea <0-4> [<0-4>] [<0-4>] [<0-4>] [<0-4>]
```

Parameters

encryption

Set encryption algorithms for SGSN

gea

GPRS Encryption Algorithm

<0-4>

GEAn Algorithm Number

[<0-4>]

GEAn Algorithm Number

[<0-4>]

GEAn Algorithm Number

[<0-4>]

GEAn Algorithm Number

[<0-4>]

GEAn Algorithm Number

1.19.18 encryption uea <0-2> [<0-2>] [<0-2>]

Command

```
encryption uea <0-2> [<0-2>] [<0-2>]
```

Parameters

encryption

Set encryption algorithms for SGSN

uea

UTRAN (3G) encryption algorithms to allow: 0 = UEA0 (no encryption), 1 = UEA1, 2 = UEA2.

<0-2>

UEAn Algorithm Number

[<0-2>]

UEAn Algorithm Number

[<0-2>]

UEAn Algorithm Number

1.19.19 ggsn <0-255> echo-interval <1-36000>

Command

```
ggsn <0-255> echo-interval <1-36000>
```

Parameters

ggsn

Configure the GGSN information

<0-255>

GGSN Number

echo-interval

Send an echo request to this static GGSN every interval.

<1-36000>

Interval between echo requests in seconds.

1.19.20 ggsn <0-255> gtp-version (0|1)

Command

```
ggsn <0-255> gtp-version (0|1)
```

Parameters

ggsn

Configure the GGSN information

<0-255>

GGSN Number

gtp-version

GTP Version

0

Version 0

1

Version 1

1.19.21 ggsn <0-255> no echo-interval

Command

```
ggsn <0-255> no echo-interval
```

Parameters

ggsn

Configure the GGSN information

<0-255>

GGSN Number

no

Negate a command or set its defaults

echo-interval

Send an echo request to this static GGSN every interval.

1.19.22 ggsn <0-255> remote-ip A.B.C.D

Command

```
ggsn <0-255> remote-ip A.B.C.D
```

Parameters

ggsn

Configure the GGSN information

<0-255>

GGSN Number

remote-ip

Configure this static GGSN to use the specified remote IP address.

A.B.C.D

IPv4 Address

1.19.23 ggsn dynamic

Command

```
ggsn dynamic
```

Parameters

ggsn

Configure the GGSN information

dynamic

Enable dynamic resolving of GGSNs based on DNS resolving the APN name like in a GRX-style setup. Changing this setting requires a restart.

1.19.24 grx-dns-add A.B.C.D

Command

```
grx-dns-add A.B.C.D
```

Parameters

grx-dns-add

Use the specified IP address for DNS-resolving the AP names to GGSN IP addresses

A.B.C.D

IPv4 address

1.19.25 gsup ipa-name NAME

Command

```
gsup ipa-name NAME
```

Parameters

gsup

GSUP Parameters

ipa-name

Set the IPA name of this SGSN

NAME

A unique name for this SGSN. For example: PLMN + redundancy server number: SGSN-901-70-0. This name is used for GSUP routing and must be set if more than one SGSN is connected to the network. The default is 'SGSN-00-00-00-00-00-00'.

1.19.26 gsup oap-id <0-65535>

Command

```
gsup oap-id <0-65535>
```

Parameters

gsup

GSUP Parameters

oap-id

Set the OAP client ID for authentication on the GSUP protocol. This setting only applies if 'auth-policy remote' is used.

<0-65535>

OAP client ID (0 == disabled)

1.19.27 gsup oap-k K

Command

```
gsup oap-k K
```

Parameters

gsup

GSUP Parameters

oap-k

Set the OAP shared secret key K for authentication on the GSUP protocol. This setting only applies if auth-policy remote is used.

K

K value (16 byte) hex

1.19.28 gsup oap-opc OPC

Command

```
gsup oap-opc OPC
```

Parameters

gsup

GSUP Parameters

oap-opc

Set the OAP shared secret OPC for authentication on the GSUP protocol. This setting only applies if auth-policy remote is used.

OPC

OPC value (16 byte) hex

1.19.29 gsup remote-ip A.B.C.D

Command

```
gsup remote-ip A.B.C.D
```

Parameters

gsup

GSUP Parameters

remote-ip

Set the IP address of the remote GSUP server (e.g. OsmoHLR). This setting only applies if 'auth-policy remote' is used.

A.B.C.D

IPv4 Address

1.19.30 gsup remote-port <0-65535>

Command

```
gsup remote-port <0-65535>
```

Parameters

gsup

GSUP Parameters

remote-port

Set the TCP port of the remote GSUP server, see also 'gsup remote-ip'

<0-65535>

Remote TCP port

1.19.31 gtp local-ip A.B.C.D

Command

```
gtp local-ip A.B.C.D
```

Parameters

gtp

GTP Parameters

local-ip

Set the IP address for the local GTP bind for the Gp interface (towards the GGSNs). Note: in case you would like to run the GGSN on the same machine as the SGSN, you can not run both on the same IP address, since both sides are specified to use the same GTP port numbers (2123 and 2152). For example, you could use 127.0.0.1 for the SGSN and 127.0.0.2 for the GGSN in such situations.

A.B.C.D

IPv4 Address

1.19.32 gtp state-dir PATH

Command

```
gtp state-dir PATH
```

Parameters

gtp

GTP Parameters

state-dir

Set the directory for the GTP State file

PATH

Local Directory

1.19.33 imsi-acl (add|del) IMSI

Command

```
imsi-acl (add|del) IMSI
```

Parameters

imsi-acl

Access Control List of foreign IMSIs

add

Add IMSI to ACL

del

Remove IMSI from ACL

IMSI

IMSI of subscriber

1.19.34 iu rab-assign-addr-enc (x213|v4raw)

Command

```
iu rab-assign-addr-enc (x213|v4raw)
```

Parameters

iu

Iu interface protocol options

rab-assign-addr-enc

Choose RAB Assignment's Transport Layer Address encoding

x213

ITU-T X.213 compliant address encoding (default)

v4raw

32bit length raw IPv4 address (for ip.access nano3G)

1.19.35 mme NAME

Command

```
mme NAME
```

Parameters

mme

Configure an MME peer

NAME

Name identifying the MME peer

1.19.36 no access-point-name NAME

Command

```
no access-point-name NAME
```

Parameters

no

Negate a command or set its defaults

access-point-name

Configure a global list of allowed APNs

NAME

Remove entry with NAME

1.19.37 no cdr filename

Command

```
no cdr filename
```

Parameters

no

Negate a command or set its defaults

cdr

CDR

filename

Disable saving CDR to file

1.19.38 no cdr trap

Command

```
no cdr trap
```

Parameters

no

Negate a command or set its defaults

cdr

CDR

trap

Disable sending CDR via TRAP CTRL messages

1.19.39 no compression rfc1144

Command

```
no compression rfc1144
```

Parameters

no

Negate a command or set its defaults

compression

Configure compression

rfc1144

disable rfc1144 TCP/IP header compression

1.19.40 no compression v42bis

Command

```
no compression v42bis
```

Parameters

no

Negate a command or set its defaults

compression

Configure compression

v42bis

disable V.42bis data compression

1.19.41 no encryption cipher-plugin-path PATH

Command

```
no encryption cipher-plugin-path PATH
```

Parameters

no

Negate a command or set its defaults

encryption

Set encryption algorithms for SGSN

cipher-plugin-path

Path to gprs encryption cipher plugin directory

PATH

Plugin path

1.19.42 no mme NAME

Command

```
no mme NAME
```

Parameters

no

Negate a command or set its defaults

mme

Delete an MME peer configuration

NAME

Name identifying the MME peer

1.19.43 timer [TNNNN] [<0-2147483647>|default]

Command

```
timer [TNNNN] [(<0-2147483647>|default)]
```

Parameters

timer

Configure or show timers

[TNNNN]

T- or X-timer-number -- 3GPP compliant timer number of the format '1234' or 'T1234' or 't1234'; Osmocom-specific timer number of the format: 'X1234' or 'x1234'.

[<0-2147483647>]

New timer value

[default]

Set to default timer value

1.19.44 timer gtp [TNNNN] [<0-2147483647>|default]

Command

```
timer gtp [TNNNN] [(<0-2147483647>|default)]
```

Parameters

timer

Configure or show timers

gtp

GTP (libgtp) timers

[TNNNN]

T- or X-timer-number -- 3GPP compliant timer number of the format '1234' or 'T1234' or 't1234'; Osmocom-specific timer number of the format: 'X1234' or 'x1234'.

[<0-2147483647>]

New timer value

[default]

Set to default timer value

1.20 config-sgsn-mme

1.20.1 gtp ran-info-relay <0-999> <0-999> <0-65535>

Command

```
gtp ran-info-relay <0-999> <0-999> <0-65535>
```

Parameters

gtp

Configure GTP connection

ran-info-relay

Configure RAN Information Relay routing

<0-999>

MCC

<0-999>

MNC

<0-65535>

TAC

1.20.2 gtp ran-info-relay default

Command

```
gtp ran-info-relay default
```

Parameters

gtp

Configure GTP connection

ran-info-relay

Configure RAN Information Relay routing

default

Set as default route

1.20.3 gtp remote-ip A.B.C.D

Command

```
gtp remote-ip A.B.C.D
```

Parameters

gtp

Configure GTP connection

remote-ip

Set Remote GTP IP address

A.B.C.D

IP information

1.20.4 gummei <0-999> <0-999> <0-65535> <0-254>

Command

```
gummei <0-999> <0-999> <0-65535> <0-254>
```

Parameters

gummei

Configure the mme

<0-999>

MCC

<0-999>

MNC

<0-65535>

MME GroupId

<0-254>

MME Code

1.20.5 no gtp ran-info-relay <0-999> <0-999> <0-65535>

Command

```
no gtp ran-info-relay <0-999> <0-999> <0-65535>
```

Parameters

no

Negate a command or set its defaults

gtp

Configure GTP connection

ran-info-relay

Configure RAN Information Relay routing

<0-999>

MCC

<0-999>

MNC

<0-65535>

TAC

1.20.6 no gtp ran-info-relay default

Command

```
no gtp ran-info-relay default
```

Parameters

no

Negate a command or set its defaults

gtp

Configure GTP connection

ran-info-relay

Configure RAN Information Relay routing

default

Set as default route

1.20.7 no gummei

Command

```
no gummei
```

Parameters

no

Negate a command or set its defaults

gummei

Remove gummei